


# Assembly instruction




## Fixings included:

1. 4 x Plastic feet
2. 3 x Allen bolts
3. 1 x Allen key
4. 4 x Plastic spacers

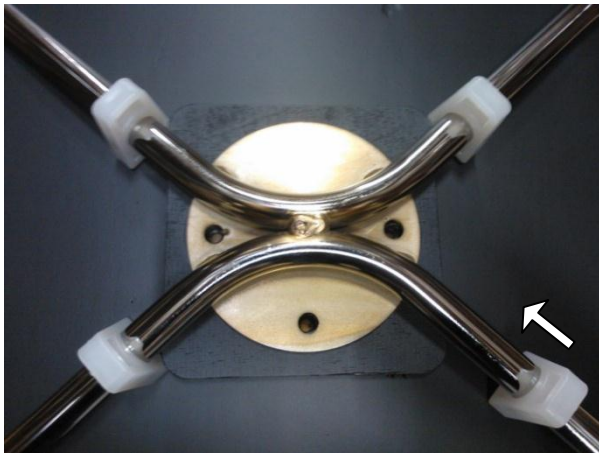


1. Thread the white plastic spacers onto the tubular legs

**!! Make sure that they are placed as close to the wooden plate as possible!!**

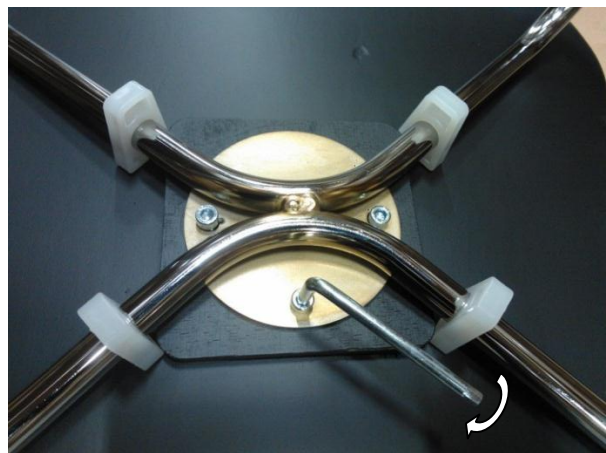

2. Tighten the allen bolts.

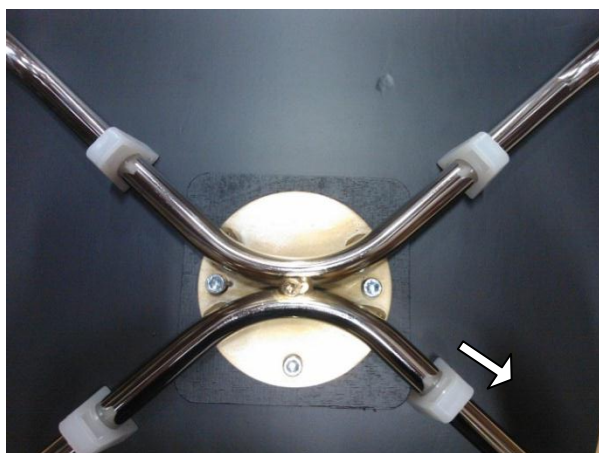

3. Push the spacers outwards until they support the seat.



4. Knock in the plastic feet.